

JET^oCHILL

C R E A T E A R E A C T I O N



CYCLONE MANUAL VERSION M1.0

CYCLONE PRODUCT SPEC

SPECIFICATIONS:


Operation: Automatic

Material: Plastic


Size: 60cm x 15 x 15 (24" x 8" x 8")

Total Weight: 5kg (11lb)

Vessel Lid

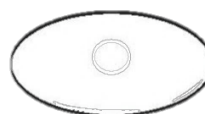


Magnetic Blade

 

Mixer Vessel



 Vessel Spigot



Magnetic Motor

LED Lights


Power Connection



On/Off Button

LED Control

Blade Speed Control

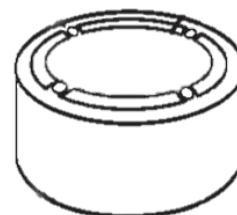

Power Supply



Disclaimer

JetChill Ltd supply equipment and products which enable entertainment operators to provide their customers with theatrical entertainment.

JetChill have endeavoured to ensure their products are safe when used correctly and in accordance with the instructions contained in this manual.

JetChill cannot be held responsible for any injuries or claims, both civil and criminal, caused by the use of the equipment and products contrary to these guidelines.

Warning

Read all instructions before using your Cyclone. When using an electrical and/or magnetic appliance, basic safety precautions should always be observed!

- Only use the supplied power supply
- Only plug into a standard electrical outlet
- Only use the supplied Magnetic Blade
- Do not place the electric cord or the electric motor in water
- Not a toy. Do NOT look at LED's directly. Use caution when children are present
- This product contains powerful neodymium magnets. Do not place other electronics (i.e. mobile phones, computers) in close proximity
- Do NOT leave the vessel on the motor when NOT in use! This will prematurely dim / burn out the LED lights and damage the magnet motor
- Do NOT leave magnetic blade on or near magnetic motor (in the magnetic field) when not in use as this will damage the blade
- Inspect the device prior to each use
- Only use a soft non-abrasive cloth and detergent to clean.

INSTRUCTIONS

Operation

The Cyclone creates a vortex within the Vessel by using a magnetic force to spin the Magnetic Blade. A visible vortex at the top and through the liquid in the vessel is common & desired.

Follow these steps to use your Cyclone Machine:

1. Place the Motor Base on a secure and level countertop or table and clear from mishap or possible accident.
2. Be sure to have unobstructed and dry access to a standard electrical outlet.
3. Place the Magnetic Blade into the bottom of the Vessel.
4. Fill the Vessel with any drink mix. Blade will remain or sink to the bottom and position into the center of the vessel. Be sure the blade is not attached to the Magnetic Activation on the Vessel bottom and lays flat on the base.
5. Plug the Power Supply into a standard outlet then plug into Magnetic Motor.
6. Turn the LED & Motor Speed Dials FULLY Counter Clockwise (lower brightness & slower speed).
7. Place Vessel on top of Motor Base allowing the Alignment Wings to center and position the Vessel on the Motor Base (note, the Vessel Spigot positioned opposite/180 degrees from the Power Connection on the Magnetic Motor). When Vessel is centered into position, the LED's will illuminate and the Magnetic Blade will begin to spin (gradually increase motor speed to spin).
8. GRADUALLY increase Motor speed and LED brightness (turn dials clockwise) to desired vortex and LED brightness. Within 30-60 seconds you should observe a vortex at the top surface of the water. Adjust Motor Speed Dial so Vortex should be approx 5cm (2") – 10 cm (4") deep.
9. Slowly add Glitter into the drink mix (60 second pour). Avoid dumping all Glitter at once into the drink in Vessel as this will dislodge the Magnetic Blade. Allow to mix for 1 minute.
10. Slowly (30 second pour) add alcohol (optional) to Vessel.
11. Place Vessel Lid on the top of the Vessel to cover.

TROUBLESHOOTING

Care and Cleaning

There are no consumer serviceable parts inside the Cyclone! Do not open encasement or immerse motor in water.

Vessel can be easily hand cleaned. Remove Vessel from the Motor Base. Rinse with water and wipe with a damp non-abrasive cloth. Use non-abrasive detergent on Vessel, Lid, Motor Base, and Magnetic Blade.

Trouble Shooting

1. The Magnetic Blade is not spinning.

Be sure the Magnetic Blade is in the Vessel. Turn Motor Speed Dial SLOWER – counter clockwise. Wait for the Blade to sink to the bottom of the Vessel before placing the Vessel on the Motor. GRADUALLY turn Speed Dial clockwise until Blade begins to spin. Be sure the Motor is plugged into a standard outlet and the cord plugged into the Motor.

2. I hear a ‘clanking’ inside the Vessel (decoupling of the Motor Magnets and the Magnetic Blade).

Remove the Vessel from the Motor. Wait 10 seconds. Turn Motor Speed Dial SLOWER-counter clockwise. Replace the Vessel on the Motor. GRADUALLY turn Speed Dial clockwise until Blade begins to spin.

3. I poured the drink into the Vessel too quickly and the Magnetic Blade stopped.

Remove the Vessel from the Motor. Use a long spoon or utensil, stir drink inside the vessel counter-clockwise. Be sure the Magnetic Blade is centered and on the bottom of the Vessel. Replace the Vessel on the Motor.

WARRANTY

Terms & Conditions

JetChill warrants this product to be free from defects in material and workmanship for a period of 180 days from the date of the original purchase, when utilized in accordance with the directions in this manual, subject to the following conditions, exclusions and exceptions.

If your Cyclone fails to operate properly while in use under normal conditions within the warranty period, return the complete defective component and accessories, freight prepaid. We recommend to insure your shipment as damage in transit to us is not covered. For customer service support please call +44 (0) 845 388 4321 or email info@jetchill.com.

If the Cyclone is found to be defective in material or workmanship at the sole discretion of JetChill, JetChill will repair or replace it. Be sure to include with your returned device:

1. Proof of purchase date.
2. Your name.
3. Complete address.
4. A description of what you believe may be the problem with the device. Mark on the outside of the box being returned to us "Customer Service / Return".

We constantly strive to improve our products therefore specifications contained herein are subject to change without notice.

The liability of JetChill, its agents and representatives is limited solely and exclusively only to the cost of the repair or replacement of the malfunctioned component at our election. This warranty does NOT cover normal wear of parts and does not apply to any device that has been tampered with, misused, used with another power supply, used with product other than the Glitter provided, abused, mishandling in transit. Any attempted service by an unauthorized third party voids this warranty.

This warranty is extended to the original purchaser of the Cyclone and in lieu of and excludes all other express or implied legal and/or conventional warranties. In NO EVENT shall JetChill, its agents and representatives be liable for incidental or consequential damages of any nature whatsoever and shall not exceed the sum received for the original purchase.

This warranty gives you specific legal rights, and you may also have other rights which can vary from country to country. JetChill will not be liable for extended warranties offered by distributors or resellers.

CONTACT DETAILS

JetChill Ltd

Hadrian House
Beaminster Way East
Unit 9
Kingston park
Newcastle on Tyne
NE3 2ER
United Kingdom

+ 44 (0) 845 388 4321

info@jetchill.com

www.jetchill.com

Skype: cjmyers72, robjetchill