

CYLINDER



FOOD GRADE LIQUID CO2 WITH DIP TUBE


Type: 10 Litre Cylinder Average Size: 100cm H x 15cm dia Average Weight: 15kg (full)

JetChill machine connects to Co2 cylinder with a dip tube (denoted by white stripe down)
Dip tube enables machine to withdraw liquid (instead of vapour) so machine can create solid dry ice
Cylinder can be rented or purchased from cylinder supplier
Most suppliers will deliver/collect/refill, to/from an address and also collection/return from/to store
Each country has choice of national and local suppliers (information available upon request)

Supplier Example:

Company: BOC
Dept.: Sureserve
Cylinder: 563LB
Contact: Nicola Smith/Customer Service
Phone: 0161 930 6970 / 0845 730 2302
Email: Nicola.Smith@boc.com

UK - British Standard BS 341 Part 1 No. 8:

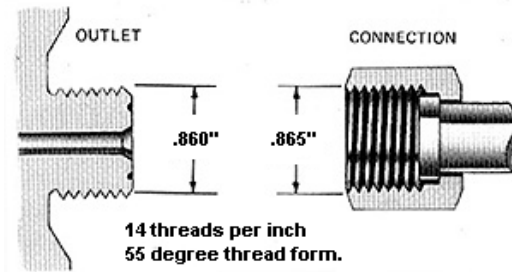

1. Please ensure you read your cylinder suppliers safety data sheets before using machine
2. Liquid Co2 Cylinders are held under high pressure (50 bar in the UK) and misuse may result in injury
3. Co2 gas is an asphyxiant and may cause injury if not handled in accordance with cylinders suppliers safety data sheet, Confined Spaces Regulation and JetChill User Manual
4. Solid Co2 (dry ice) is -79 degrees Celsius and may cause freeze burns if not used correctly in accordance with JetChill User Manual